




INSTALLATION GUIDE SMC SHOWER BASE

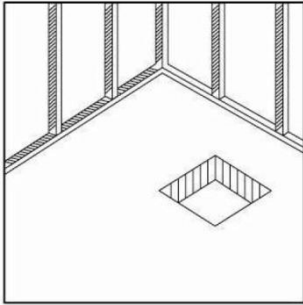


1. Floor Boards & Sheet. Flooring 200mm x 200mm cut out
*Concrete cut out 300mm x 300mm

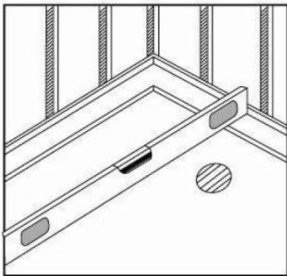


**2. Check that the
Base sits level.**

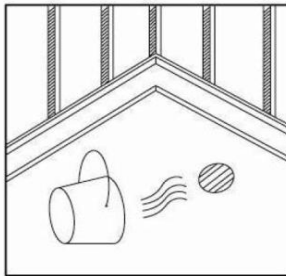

3. Test the water flow.

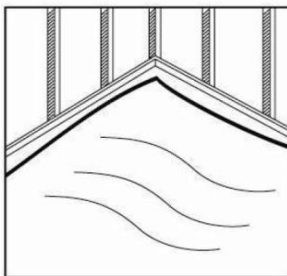

**4. Cover and protect the
Base until the shower
screen & tiles are installed.**

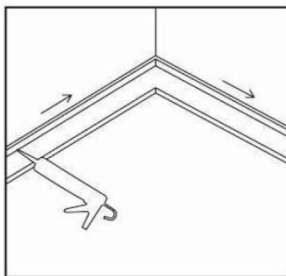

**5. Silicone the bottom edge of
the Shower Wall to the base
before the screen is fitted.**



View our site with your smart phone
www.pipersinternational.com.au

Water resistant plaster board installation. Pipers Shower base has a tile flange on 3 sides. Place your base against the framework; install water resistant plaster board directly on top of tile flange and seal joint with flexible silicone sealant.

Villa board installation. When using villa board the shower base will need to be checked into framework a minimum of 3-mm. Install villa. board directly on top of tile flange and seal joint with flexible sealant.

1. Floorboards or sheet flooring must cover the entire underside of the base. Cut hole through floor no greater than 200mm x 200mm (concrete should be 300mm x 300mm).

2. Your shower base may be installed on silicone over entire base area. Lay base on floor and check for level both sides and front & rear. This will allow base to drain effectively as it has inbuilt fall to waste outlet.

Note: If your floor is not level use a cement based tile adhesive spread on floor with a 12mm notched trowel to ensure base is fully supported.

3. Finally it is imperative to test for water run off to the waste outlet prior to lining shower walls. This will ensure base is draining correctly. Failure to do so will breach the warranty.

4. It is recommended that you cover and protect the base until first use.

5. Silicone the bottom edges of the shower wall to the base before the screen is fitted.

Cleaning

The surface of this base will resist. surface build-up. However, to preserve it's high lustre it may be cleaned with a soft cloth using warm soapy water or household detergent.

Avoid All Forms Of Abrasive

If accidental abrasions occur to the surface restoration can be achieved by polishing with silicone-based polish.

Warranty

Shower base has a warranty for 2 years against faulty materials & workmanship. Workmanship warranty will be void if shower base is not installed by a licensed plumber/builder.

Warning

Warranty will be voided if temperature from tap exceeds 55 °C and above instructions are not adhered to entirely.